



PRECISION BALANCE

BBAL-224

INDEX

I Model specification and index	2
II Working Condition	2
III Operation Requirements	3
IV Operation	3
V Calibration	4
(1) Calibration Requirements	4
(2) Calibration Procedure	4
VII Tare	5
VIII The counting operation of balance	5
IX Units	6
X Cautions	6
XI Package list	7

BBAL series precision electronic balance is a kind of intellectual measuring instrument with weighing, counting and other many functions. The product introduces imported Integrated circuit and enjoys stable and reliable performance, easy operation and accurate weighing and counting. As a kind of measuring instrument, it has been widely used by enterprises and scientific research institutions.

I Model specification and index

Model	Specification	Readability	Size of weighing tray
BBAL-223	2000-5000g	0.01g	180*180mm
BBAL-224			
BBAL-225			

II Working Condition

Working Temperature: 0°~40°C, Maximum Consumed Power: 5W, Temperature Fluctuation: 5°C/h, Power Supply: 220V±10%, 50HZ±1HZ, Comparative Humidity: 50%~85%

III Operation Requirements

When it is operated, electronic balance shall be placed on stable working platform to avoid the influences from mechanical vibration, direct sunshine and air current etc.

IV Operation

(1) Power-on

(2) Switch on the power supply behind the balance and the display indicates in turn "8.8.8.8.8.8." "Max weighing capability of balance", "=", "=", "=", "=", ". At last it shall display the weighing mode as "XXX.XXX". If any error founded in display, you may turn on and turn off the balance once more. Then it will be operated normally.

V Calibration

(1) Calibration Requirements

When distinct errors appeared in the weighing of balance, the balance shall be recalibrated to make weighing accurate. The recalibrated balance shall be placed on the stable working platform without the influences from the vibration of air current and strong electromagnetic wave. The calibration results will be more accurate 20 minutes later after the balance is operated.

(2) Calibration Procedure

One-point Calibration

Turn on the balance it shall display the weighing mode as "0.00", then press the "CAL" button until shows "CAL", then release. Display blinkingly the stand weight value and then place same value standard weight; The "===== " will be displayed; then display stably weight value and remove weight. then "===== " will be displayed. the "0.00" will be displayed;. The calibration is finished.

Three-point Calibration

Turn on the balance, it will show the "8.8.8.8.8.8.", then press the "CAL" button until the display shows "CAL", then release. The calibration procedure shall be undertaken as blow:

Display blinkingly the first point stand weight value and then place the same value standard weight;

Display stably weight value and then remove weight. The "===== " will be displayed;

Display blinkingly the second point stand weight value and then place the same value standard weight;

Display stably weight value and then remove weight. The "===== " will be displayed;

Display blinkingly the third point stand weight value and then place the same value standard weight;

Display stably weight value and then remove weight. The "0.00" will be displayed; The calibration is finished.

VII Tare

- (1) If there is a container on the weighing tray, the balance displays the weight of container.
- (2) Press "enter" and then "0.00" will be displayed. It indicates that the tare has been deducted.
- (3) Place the thing into container and the balance will display the weight of thing.

VIII The counting operation of balance

(1) Press "SET" button and "COU" will be displayed. Then display blinkingly one of value of counting mode, "5,10,20, 40, 50, 100, 200, 300, 400, 500" Press "TARE" and choose one mode value. Place the things with same quantity with mode value on the weighing tray and then press "SET" button". Then BBAL series will be displayed. Very soon, it will display stable mode value and then the setting of counting operation is finished. After that, counting operation could be conducted. Place the things in the weighing tray and display will show the quantity of thing.

Counting operation requires the weight of weighed thing must heavier than the four times of minimum reading value or the difference of counting could be great if not counting can't be done.

(2) Quit the counting operation: Press the "SET" button and then " = = = = = " will be displayed. The balance may quit counting operation state immediately and return the weighing state.

(3) Overload warning When weighing thing is over the maximum weighing value of the balance, the display will show " - - - - - " and indicate the thing is overloaded. The weighing thing shall be removed to avoid damaging the balance.

IX Units

There are three unit can be choose ,press "  " and choose the unit you need:g,ct,oz

X Cautions

- (1) Switch on power resource according to requirements to make balance warm up before usage.
- (2) Working environment and conditions shall conform to the environment requirements.
- (3) The weight of all weighing things on the weighing tray can't exceed the required weighing range.
- (4) When weighing is not accurate, calibration shall be undertaken by use of standard weight according to concerning requirements.
- (5) If user found any defection in the balance, don't try to disassemble the machine shell and repair it to avoid damaging the precision parts in the machine. Please take it to the distributor or send it to the manufacturer and let them repair.

XI Package list

Electronic balance 1 set , Instruction book 1 copy , Weighing tray 1 , Electrical wire 1



Biolab Scientific Ltd.

3660 Midland Avenue, Suite 300, Toronto, Ontario M1V 0B8, Canada
Email: info@biolabscientific.com | Website: www.biolabscientific.com